



Soft link for Main canopies  
PN: P 1487-00

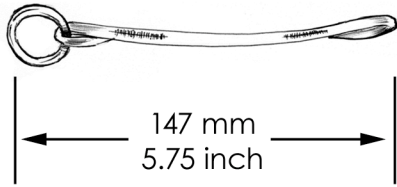

Soft link for Reserve canopies  
PN: P 1487-01

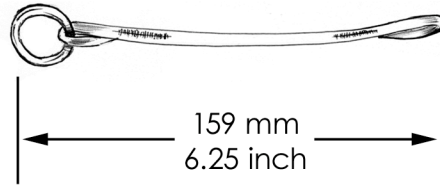

# aerodyne


## SOFT LINK INSTALLATION MANUAL

FLYAERODYNE.com

© Aerodyne Research, LLC. 12649 race track RD. Tampa, Florida 33626. U.S.A.

Tel. +1.813.891.6300 fax. +1.813.891.6315

Installation procedure on front and rear Reserve and Main risers:

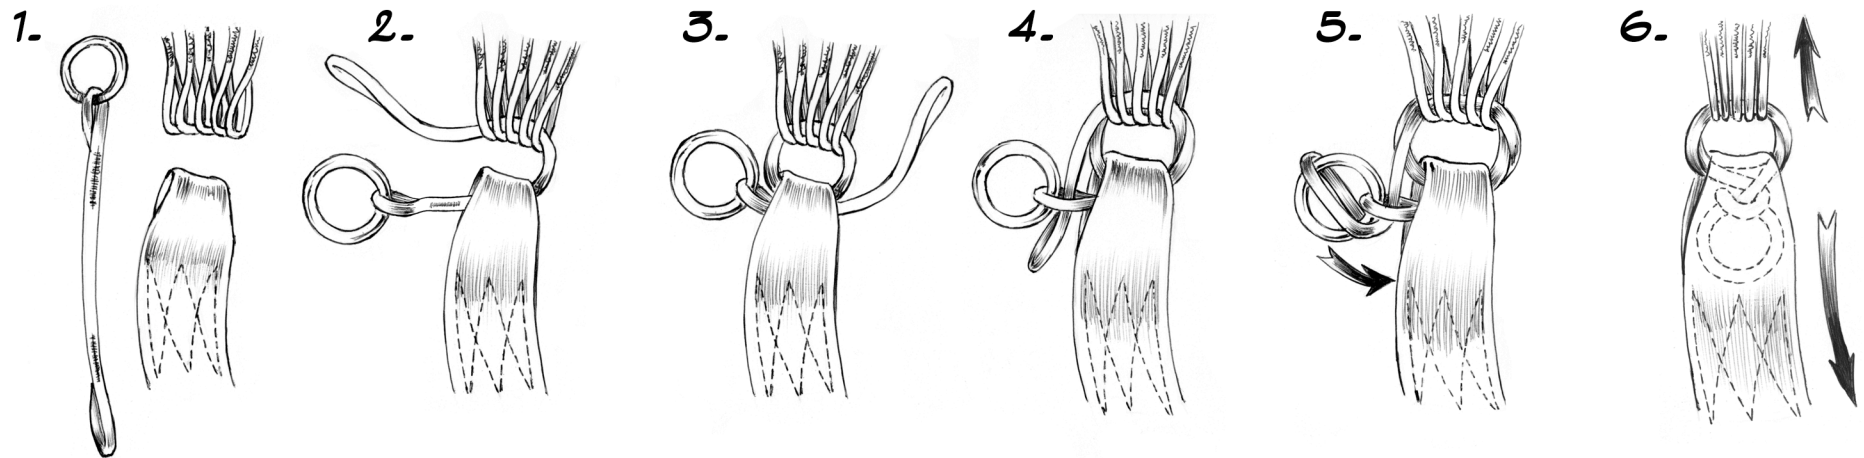

Secure the Soft Link in the webbing pocket, and hand tack as shown:

